



SLIM COMFIT 50mm

Instructions for Mounting the Slim Comfit

1. Bevel the pipe using Plas-fit's Chamfering tool.
End of pipe must be clean and round.

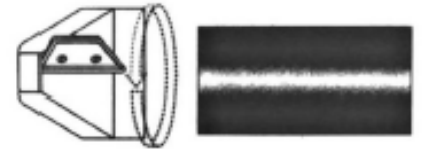

2. Push the coupler on the pipe, until the pipe-end reaches the middle of the coupler (see the pipe-end via the translucent body).

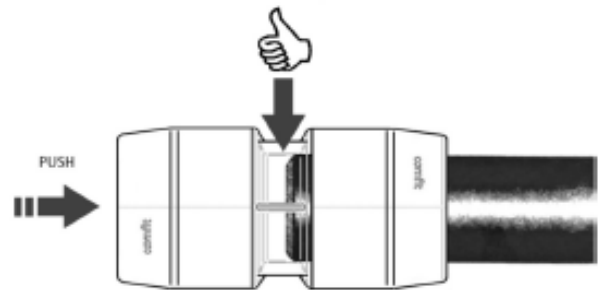

After mounting pull the pipe forcibly by hand to ensure correct installation.